

## **Pacific Resources**

### **EMERGENCY SPILL RESPONSE PROCEDURES**

#### **HOLDING TANK LEAK**

- a) Silence the alarm
- b) Determine which tank is leaking.
- c) Use appropriate valves to isolate the leaking tank.
- d) Transfer tank contents to a tanker truck or a non-leaking tank using truck vacuum pumps.
- e) Repair or replace the leaking bladder tank.
- f) Rinse, vacuum & dry the berm liner.
- g) Place tank back in service & monitor for successful repair.

#### **TRUCK COUPLING LEAK**

- a) Close the truck discharge valve.
- b) Driver uses on-site sink, shower and eyewash station if necessary.
- c) Rinse truck & pavement.
- d) Reconnect the coupling & proceed with discharge.
- e) Diatomaceous earth will be kept on hand in case a leak is not completely contained by the grate drain.

#### **FLEX HOSE LEAK**

- a) Driver closes truck discharge valve.
- b) Driver notifies on-site personnel.
- c) Driver disconnects flex hose and moves truck to opposite bay.
- d) On-site personnel replace damaged flex hose.